



# FRONT POWER SEAT LUMBAR SWITCH

## INSPECTION

### 1. INSPECT FRONT POWER SEAT LUMBAR SWITCH LH

- (a) Measure the resistance between the terminals when the switch is operated.

**Standard resistance**

Tester Connection	Switch Condition	Specified Condition
3 (B) - 4 (H)	HOLD	Below 1 $\Omega$
1 (R) - 2 (E)	HOLD	Below 1 $\Omega$
1 (R) - 2 (E)	OFF	Below 1 $\Omega$
4 (H) - 5 (E)	OFF	Below 1 $\Omega$
1 (R) - 3 (B)	RELEASE	Below 1 $\Omega$
4 (H) - 5 (E)	RELEASE	Below 1 $\Omega$

If the result is not as specified, replace the switch.

SE